




① x 1

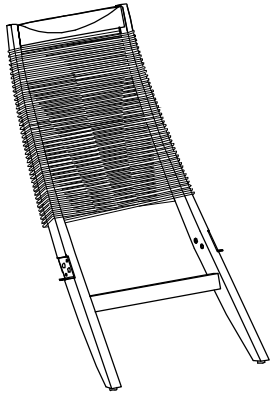


ASSEMBLY INSTRUCTION

CAVO CHAIR ROPE BLACK NATURAL

② x 1

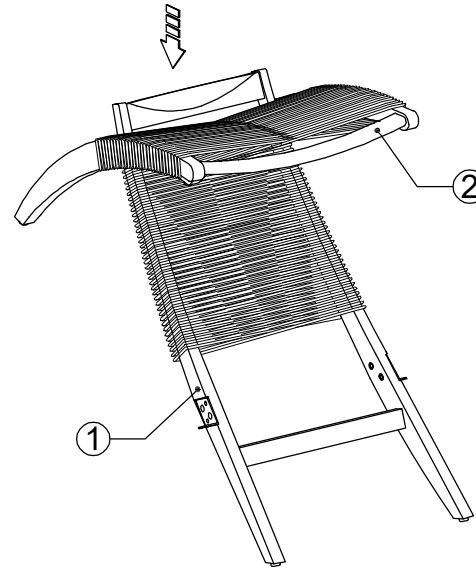

Ⓐ



Bolt 8x50 = 4 pcs

Ⓑ




Screw 6x30 = 2 pcs

Ⓒ



Hex key 4mm = 1 pc

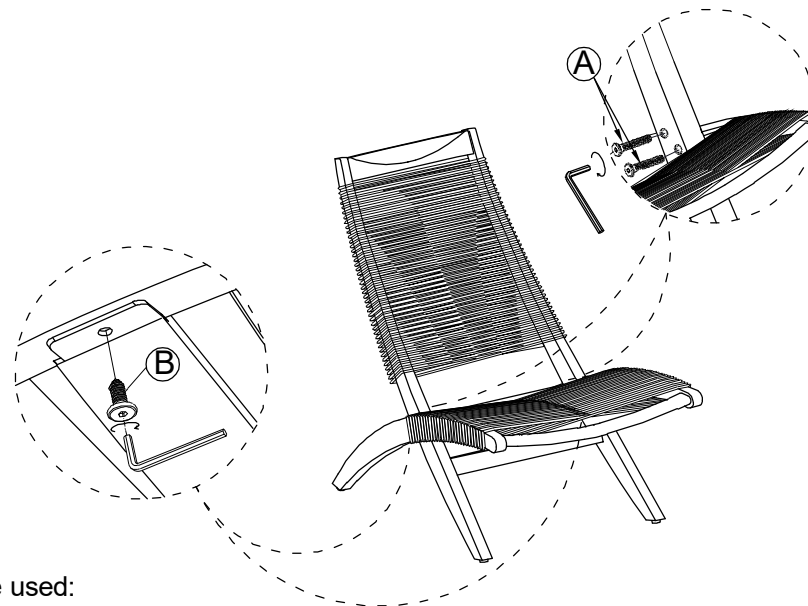

Hardware used:

Ⓐ Bolt 8x50 = 4 pcs

Ⓑ Screw 6x30 = 2 pcs

