


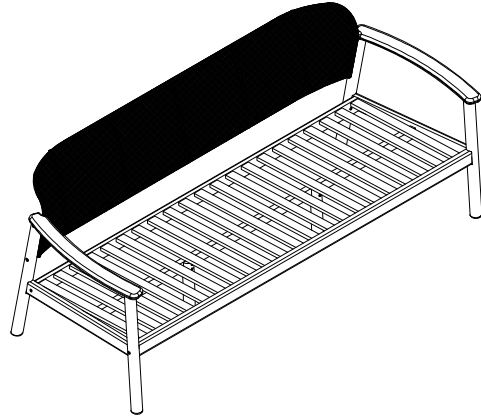
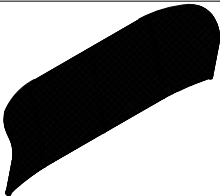






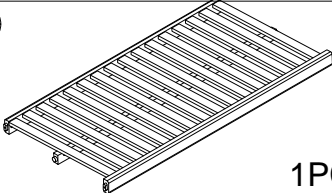

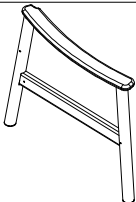

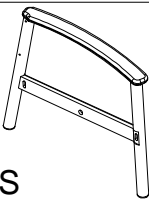

# ASSEMBLY INSTRUCTION


HUC40158




<div>A</div> <div></div> <div>1PCS</div>		<div>B</div> <div></div> <div>1PCS</div>	
<div>C</div> <div></div> <div>1PCS</div>		<div>D</div> <div></div> <div>1PCS</div>	<div>E</div> <div></div> <div>2PCS</div>
<div></div>	<div>1</div> <div>BOLT M6X75 = 2 PCS</div>	<div></div>	<div>5</div> <div>NUT M6 = 4 PCS</div>
<div></div>	<div>2</div> <div>BOLT M6X60 = 2 PCS</div>	<div></div>	<div>6</div> <div>BOLT M6X40 = 4 PCS</div>
<div></div>	<div>3</div> <div>NUT M6 = 4 PCS</div>	<div></div>	<div>7</div> <div>WASHERS M6 = 2 PCS</div>
<div></div>	<div>4</div> <div>BOLT M6X65 = 4 PCS</div>	<div></div>	<div>8</div> <div>ALLEN KEY = 2 PCS</div>

These instructions must be used to ease the assembly of your furniture.  
Please ensure that you have all the components before assembly.  
Remember to place the part on a carpeted floor or blanket in order to protect them from damage while you assemble.


## STEP 1

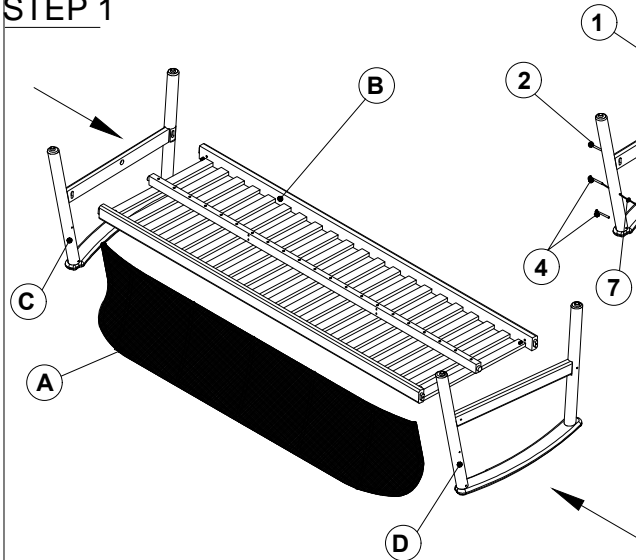

## STEP 2

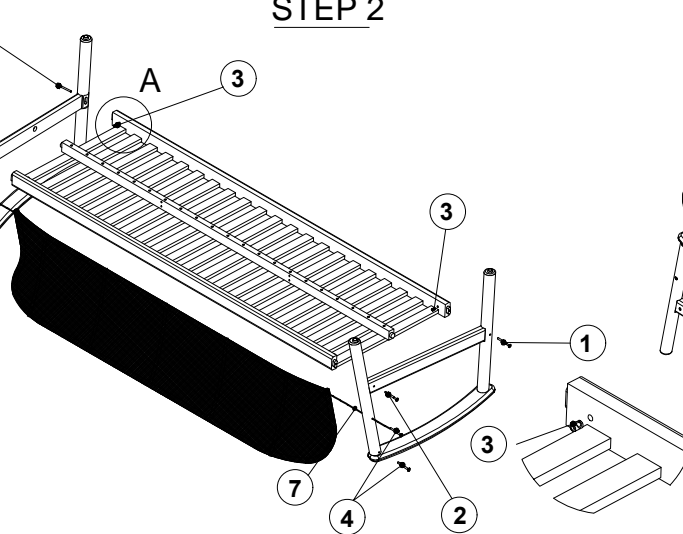


DETAILA

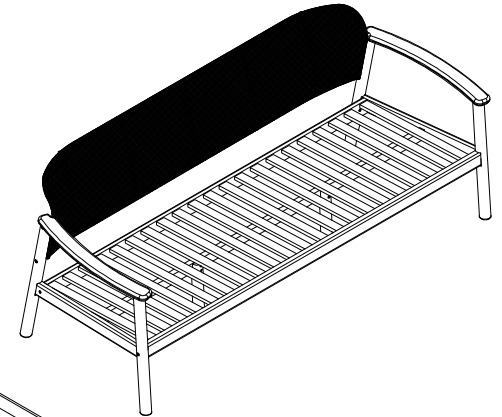


# ASSEMBLY INSTRUCTION

HUC40158



## STEP 3

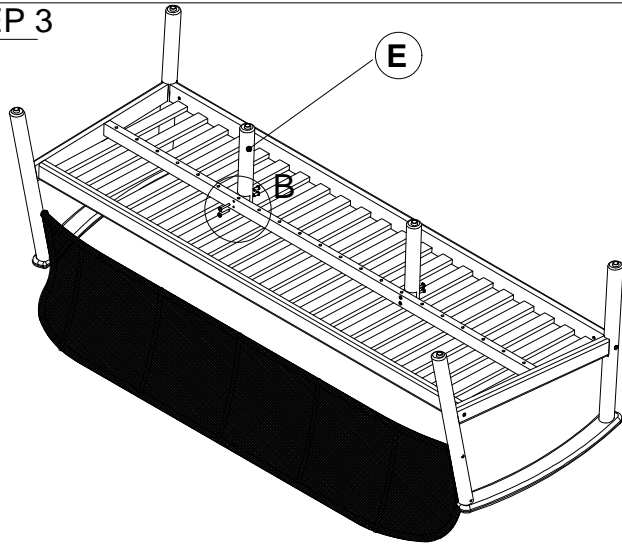

## STEP 4

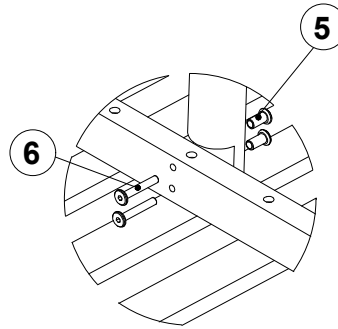


DETAIL B

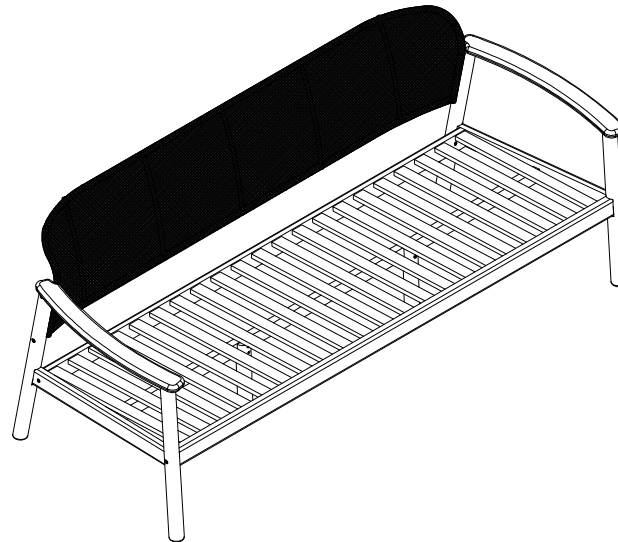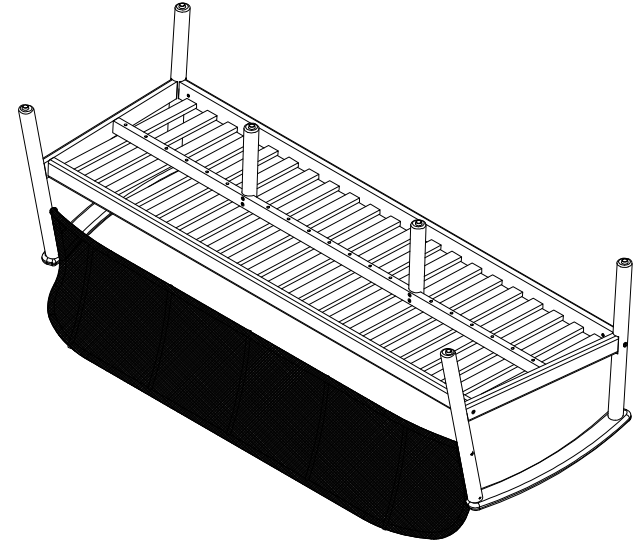











FINISHED
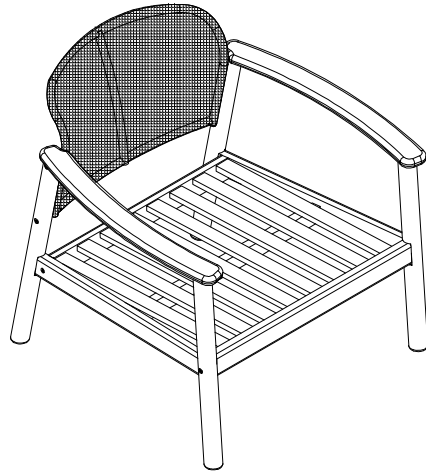
# ASSEMBLY INSTRUCTION


HUC40137

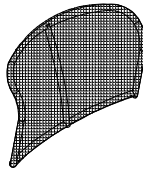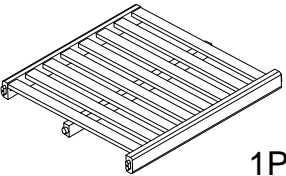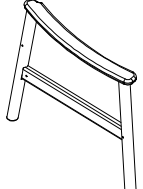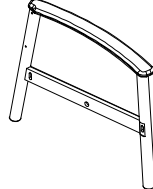



These instructions must be used to ease the assembly of your furniture.  
Please ensure that you have all the components before assembly.  
Remember to place the part on a carpeted floor or blanket in order to protect them from damage while you assemble.

<b>A</b>  <b>1PCS</b>	<b>B</b>  <b>1PCS</b>
<b>C</b>  <b>1PCS</b>	<b>D</b>  <b>1PCS</b>
 <b>1</b> BOLT M6X75 = 2 PCS	 <b>4</b> BOLT M6X65 = 4 PCS
 <b>2</b> BOLT M6X60 = 2 PCS	 <b>5</b> WASHERS M6 = 2 PCS
 <b>3</b> NUT M6 = 4 PCS	 <b>6</b> ALLEN KEY = 2 PCS

## STEP 1

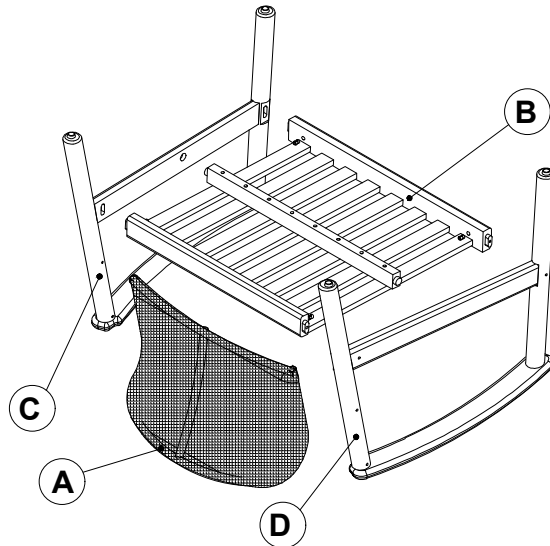


## STEP 2

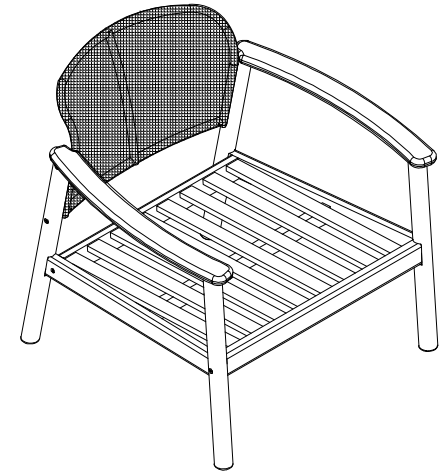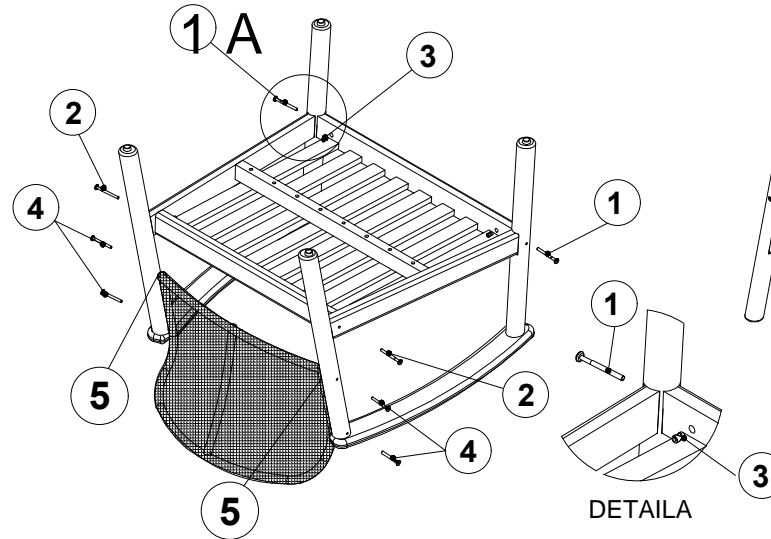


FINISHED

# ASSEMBLY INSTRUCTION


HUC38289

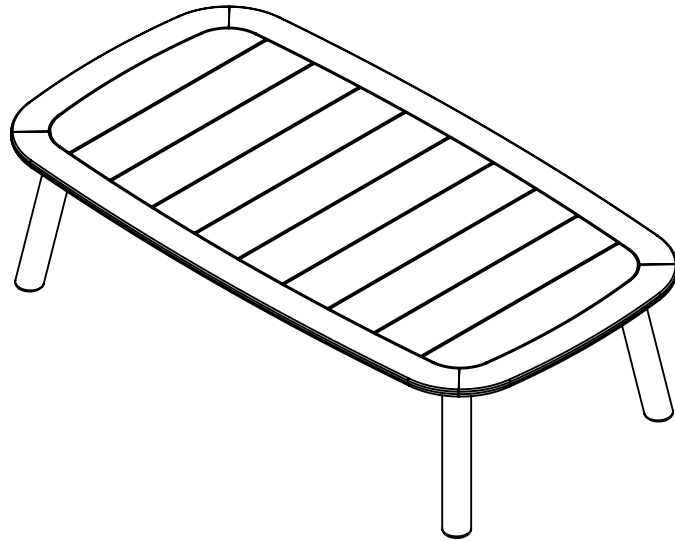

These instructions must be used to ease the assembly of your furniture.  
Please ensure that you have all the components before assembly.  
Remember to place the part on a carpeted floor or blanket in order to protect them from damage while you assemble.

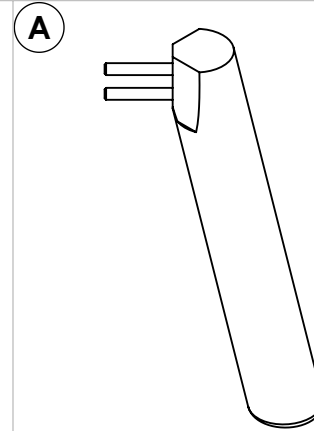

4 PCS

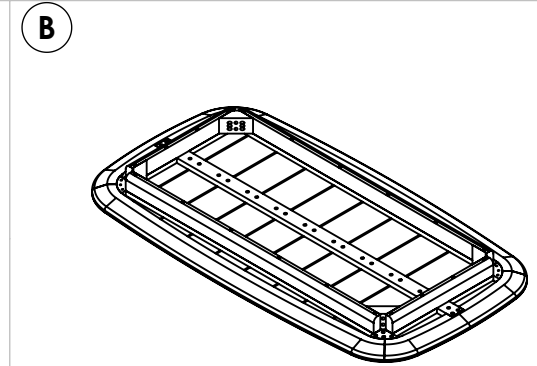

1PCS



1 WASHER M8 = 8PCS




2 NUT M8 = 8PCS




3 KEY = 1PCS

## STEP 1

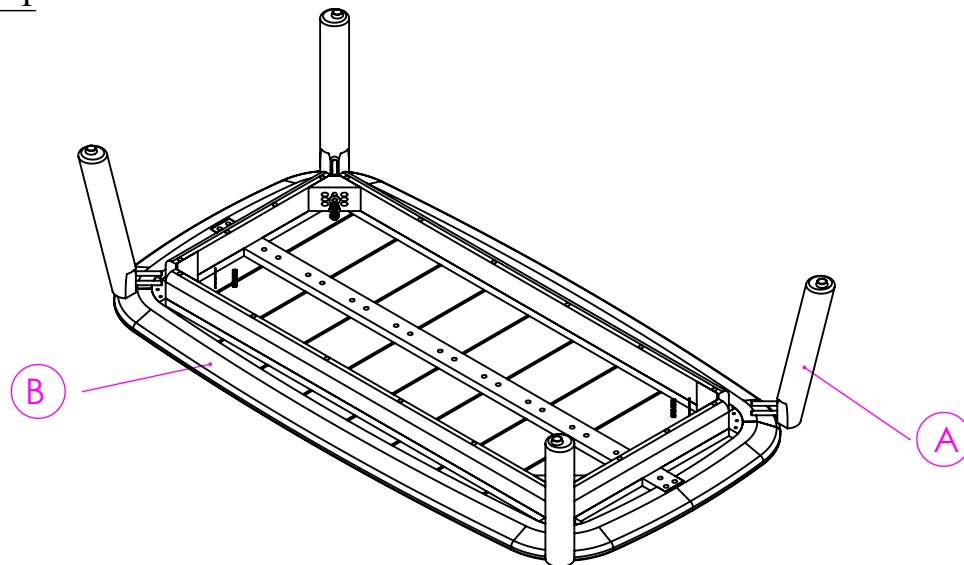

## STEP 2

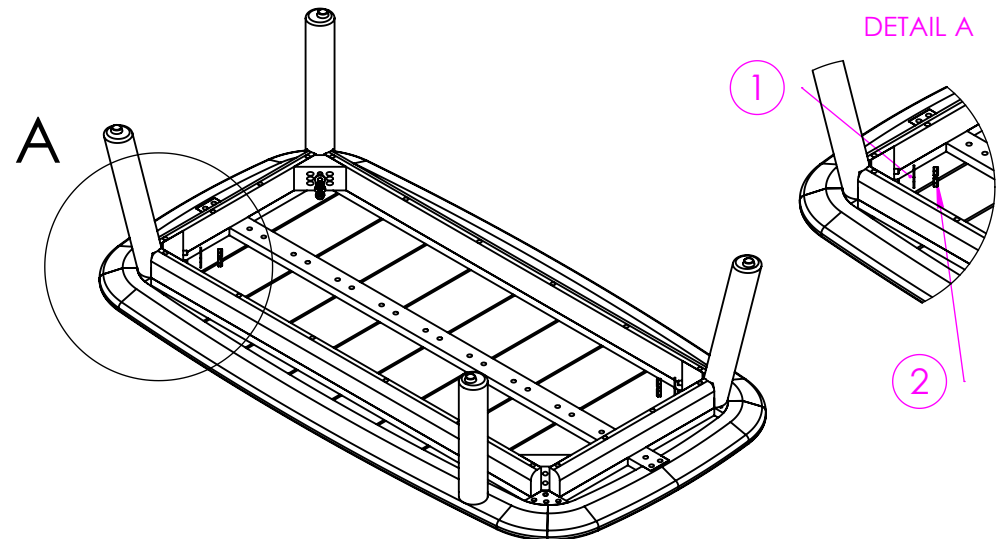

FINISHED