

20 MIN

2 X




(D) AUFBAUANLEITUNG  
(NL) HANDLEIDING VOOR DE MONTAGE  
(TR) MONTAJ TALIMATI  
(RO) INSTRUCTIUNI DE ASAMBLARE  
(F) INSTRUCTION D'ASSEMBLAGE  
(CZ) POKYNY K MONTÁŽI  
(BG) ИНСТРУКЦИИ ЗА МОНТАЖ  
(HR) UPUTSTVA ZA MONTAŽU


(GB) ASSEMBLY INSTRUCTIONS  
(PL) INSTRUKCJA MONTAŻU  
(RU) Инструкция по монтажу  
(I) PROCEDURA DI ASSEMBLAGGIO  
(SK) POKYNY K MONTÁŽI  
(HU) ÖSSZESZERELÉSI ÚTMUTATÓ  
(SLO) NAVODILA ZA MONTAŽO  
(S) MONTERINGSANVISNING  
(LT) DIEGIMO INSTRUKCIJOS  
(E) INSTRUCCIONES DE MONTAJE

MODEL

“MM 277 MONSERAT”

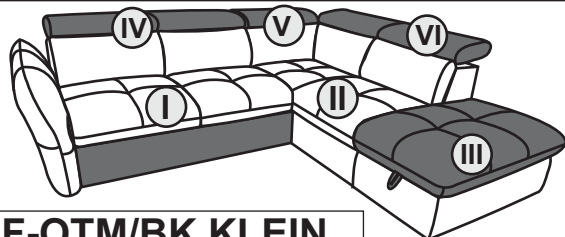


2F-OTM/BK KLEIN

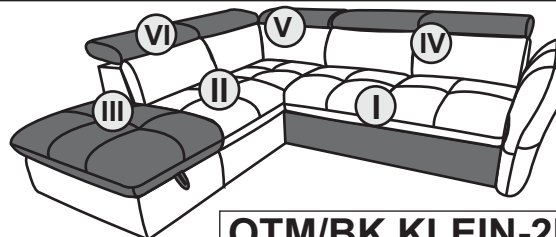


OTM/BK KLEIN-2F


1/3

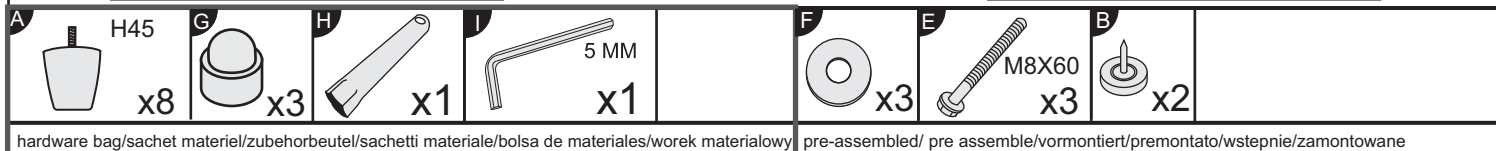



1

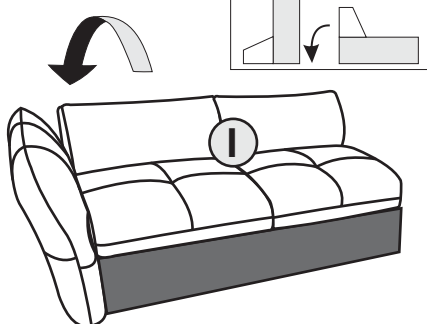


2

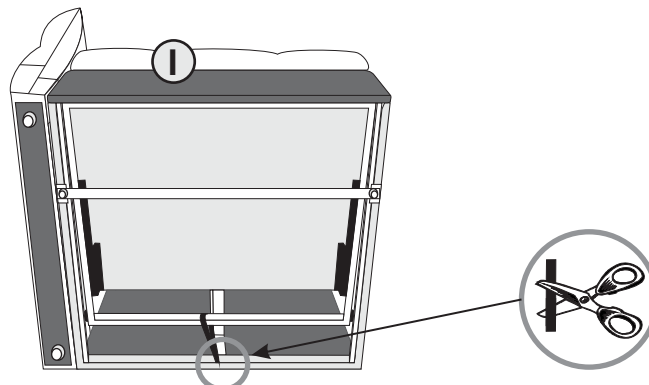


3

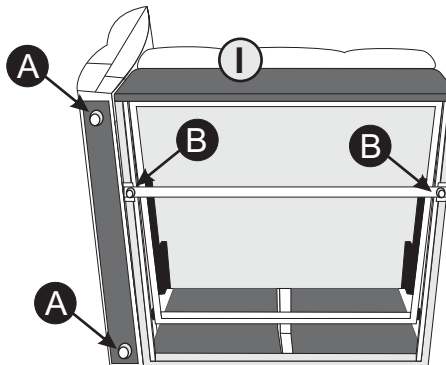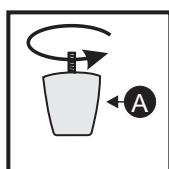

4

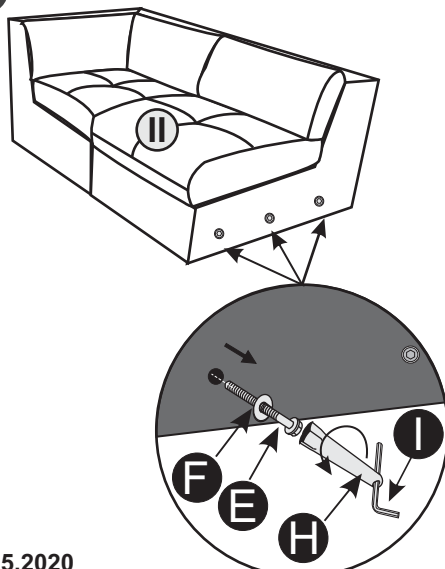

5

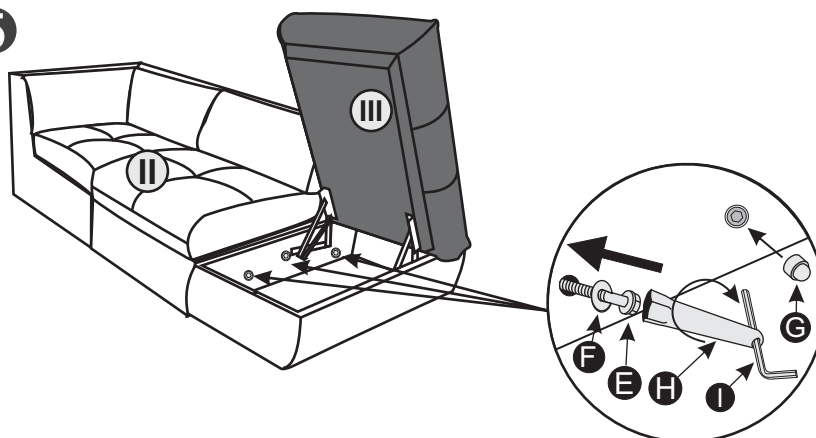

PENSEZ  
AU TRI!



ENSEMBLE  
REDUONS L'IMPACT  
ENVIRONNEMENTAL  
DES EMBALLAGES

ÉLÉMENTS BOIS  
PLASTIQUE  
A JETER

ÉLÉMENTS  
METAL CARTON  
PAPIER  
A RECYCLER

A RECYCLER

A RECYCLER

A RECYCLER

A RECYCLER

20 MIN



2 X



(D) AUFBAUANLEITUNG  
(NL) HANDLEIDING VOOR DE MONTAGE  
(TR) MONTAJ TALIMATI  
(RO) INSTRUCTIUNI DE ASAMBLARE  
(F) INSTRUCTION D'ASSEMBLAGE  
(CZ) POKYNY K MONTÁŽI  
(BG) ИНСТРУКЦИИ ЗА МОНТАЖ  
(HR) UPUTSTVA ZA MONTAŽU

(GB) ASSEMBLY INSTRUCTIONS  
(PL) INSTRUKCJA MONTAŻU  
(RU) Инструкция по монтажу  
(I) PROCEDURA DI ASSEMBLAGGIO  
(SK) POKYNY K MONTÁŽI  
(HU) ÖSSZESZERELÉSI ÚTMUTATÓ  
(SLO) NAVODILA ZA MONTAŽO  
(S) MONTERINGSANVISNING  
(LT) DIEGIMO INSTRUKCIJOS  
(E) INSTRUCCIONES DE MONTAJE

MODEL

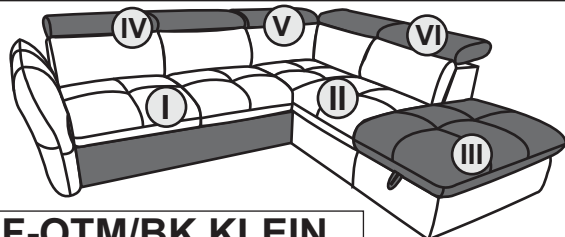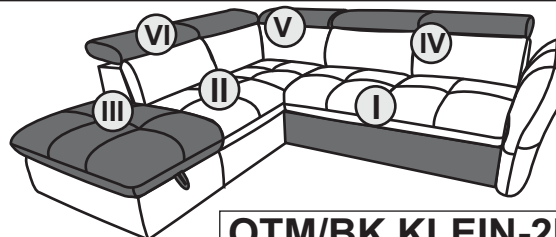**"MM 277 MONSERAT"****2F-OTM/BK KLEIN****OTM/BK KLEIN-2F**



2/3





hardware bag/sachet matériel/zubehörbeutel/sachetti materiale/bolsa de materiales/worek materiałowy

pre-assembled/ pre assemble/vormontiert/premontato/wstępnie zamontowane






6

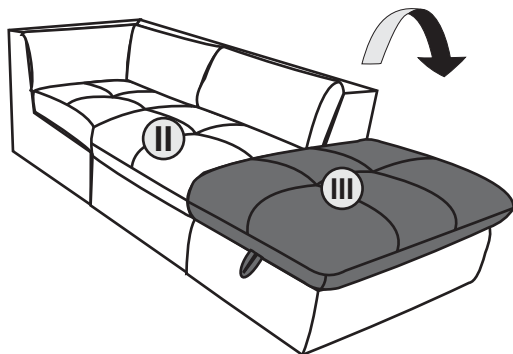

7

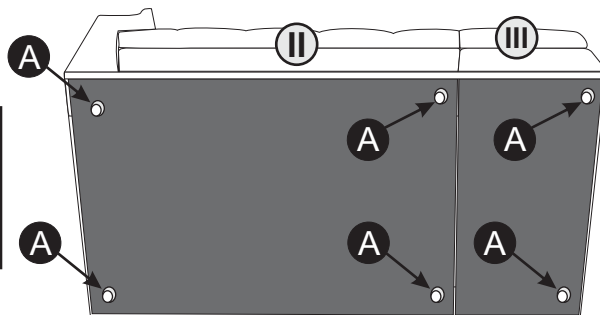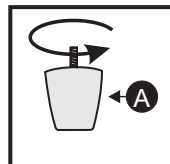

8

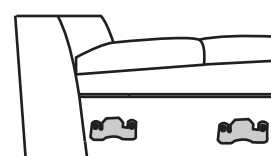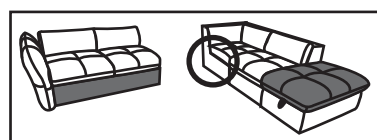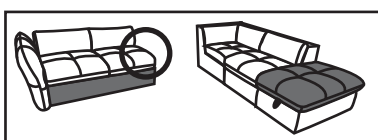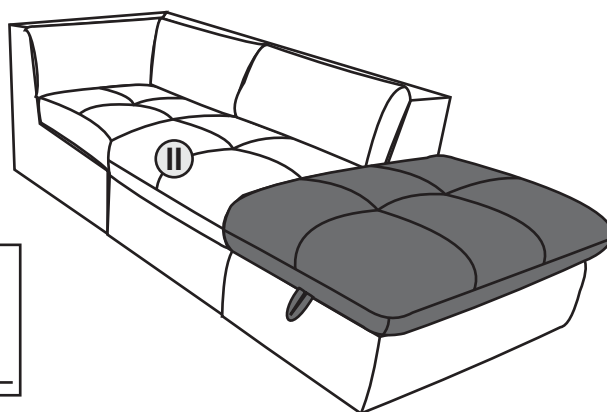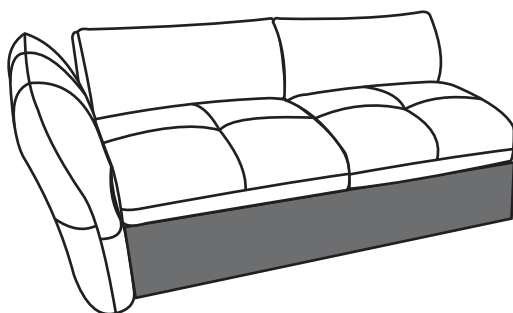

**PENSEZ AU TRI!**



ENSEMBLE  
REDUONS L'IMPACT  
ENVIRONNEMENTAL  
DES EMBALLAGES

ÉLÉMENTS BOIS  
PLASTIQUE  
A JETER

ÉLÉMENTS METAL CARTON  
PAPIER  
A RECYCLER



20 MIN



2 X



(D) AUFBAUANLEITUNG  
(NL) HANDLEIDING VOOR DE MONTAGE  
(TR) MONTAJ TALIMATI  
(RO) INSTRUCTIUNI DE ASAMBLARE  
(F) INSTRUCTION D'ASSEMBLAGE  
(CZ) POKYNY K MONTÁŽI  
(BG) ИНСТРУКЦИИ ЗА МОНТАЖ  
(HR) UPUTSTVA ZA MONTAŽU

(GB) ASSEMBLY INSTRUCTIONS  
(PL) INSTRUKCJA MONTAŻU  
(RU) Инструкция по монтажу  
(I) PROCEDURA DI ASSEMBLAGGIO  
(SK) POKYNY K MONTÁŽI  
(HU) ÖSSZESZERELÉSI ÚTMUTATÓ  
(SLO) NAVODILA ZA MONTAŽO  
(S) MONTERINGSANVISNING  
(LT) DIEGIMO INSTRUKCIJOS  
(E) INSTRUCCIONES DE MONTAJE


MODEL

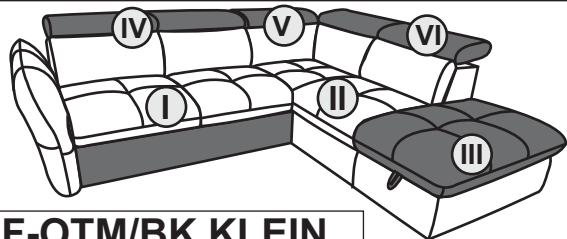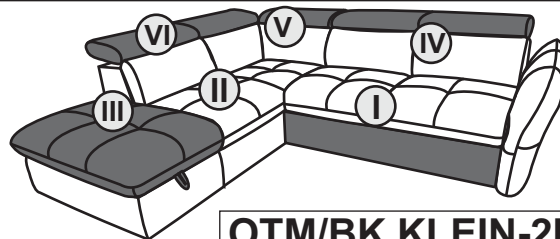**“MM 277 MONSERAT”****2F-OTM/BK KLEIN****OTM/BK KLEIN-2F**


3/3

10


1/3

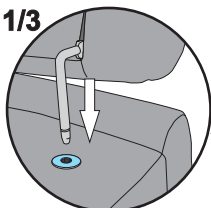


2/3

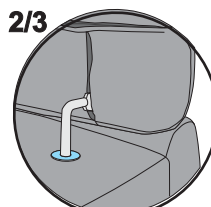


3/3

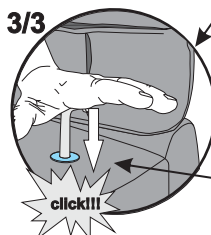


click!!!

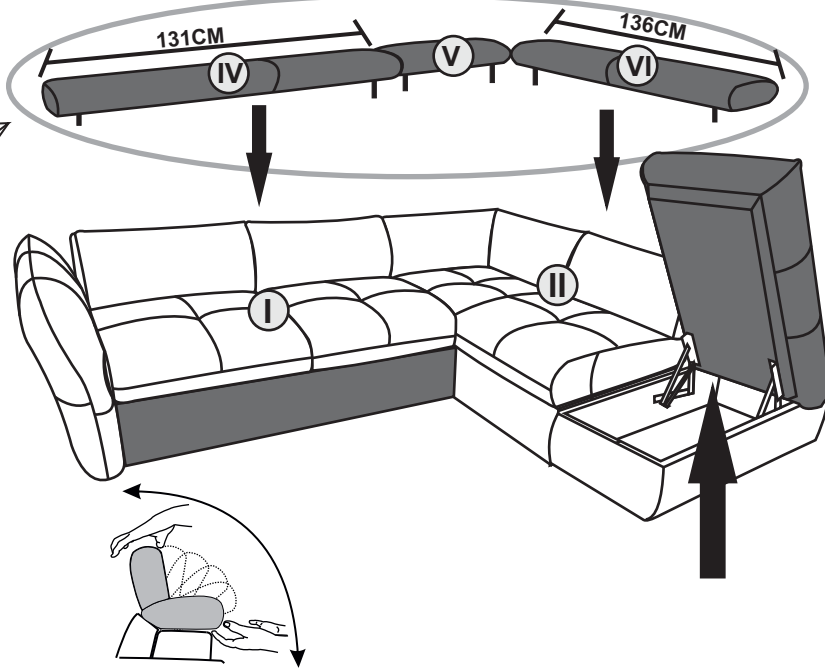


11

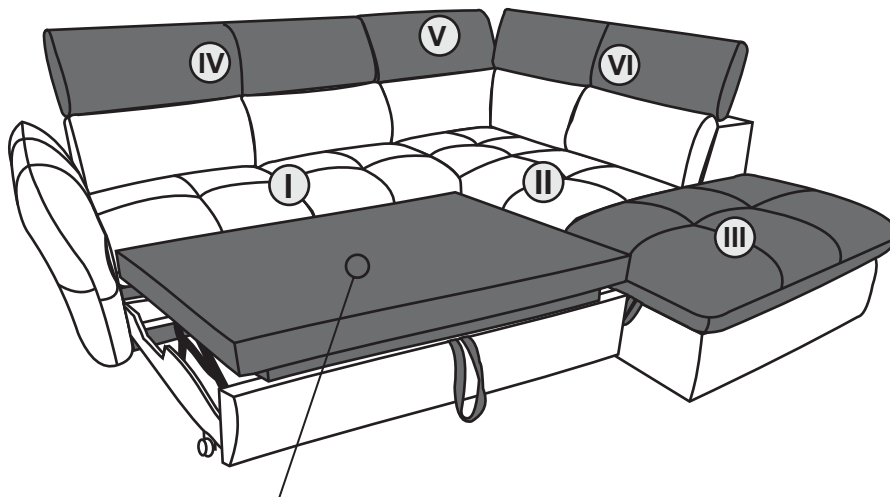


1/4

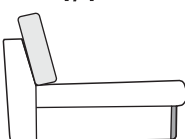


2/4

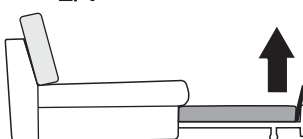

3/4

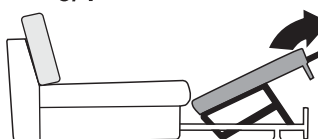

4/4

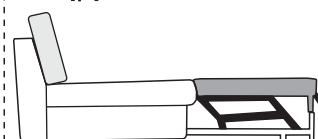

PENSEZ AU TRI!

ENSEMBLE  
REDUONS L'IMPACT  
ENVIRONNEMENTAL  
DES EMBALLAGESÉLÉMENTS BOIS  
PLASTIQUE  
A JETERÉLÉMENTS METAL CARTON  
PAPIER  
A RECYCLER